

FUSION™ LIGHT WING - LEFT INSTALLATION INSTRUCTIONS




⚠️ ENSURE FIREARM IS UNLOADED

⚠️ WARNING: Over-torquing fasteners can damage your mount and will not be covered by warranty.

1 Configure FUSION™ Light Wing with additional FUSION™ accessories and/or OEM lights utilizing included hardware. Surefire™ Scout-pattern lights will use the 8-32 screws, while FUSION™ components will use the 10-32 screws. Secure screws using a T15 bit driver. Lightly snug all screws before applying final torque to any. TORQUE TO 16 IN-LBS.

2 Install FUSION™ Light Wing on genuine FUSION™ Micro Hub 2.0 using included 10-32 screws. Secure screws using a T15 bit driver. Lightly snug all screws before applying final torque to any. TORQUE TO 16 IN-LBS. The Light Wing can cantilever forward or backward depending on which side the Micro Hub platform is facing.

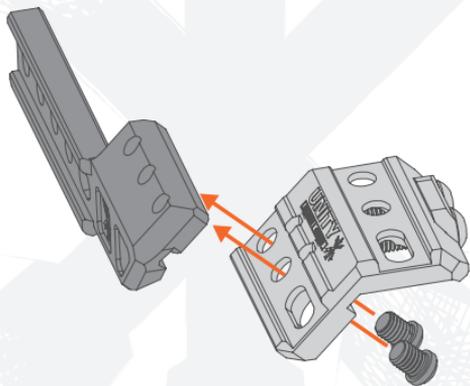

FUSION™ LIGHT WING - LEFT

INSTALLATION INSTRUCTIONS



⚠️ ENSURE FIREARM IS UNLOADED

- 3** FUSION™ Light Wings offer minute accessory mounting adjustments for precise light placement. Multiple mount holes allow for biasing accessories forward and rearward.

