

FAST™

LPVO



 **UNITY™**


CONTENTS



PRODUCT OVERVIEW

Creating a 2.05° optical centerline from the rail, the FAST™ LPVO scope mount features a zero MOA angle and is available with either 30mm or 34mm rings. The modular base accepts a suite of optional offset accessory mounts for MRDS, while an MRDS Top Ring is also available for mounting micro red dots at the 12 o'clock position.

One (1) FAST™ LPVO

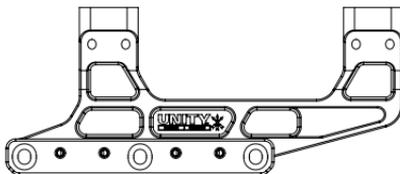

One (1) Rail Clamp



Two (2) Top Rings



Three (3) Clamp Screws



Three (3) Washers



Eight (8) Ring Screws





WARNING: ENSURE FIREARM IS UNLOADED




CAUTION:

OVER-TORQUING FASTENERS CAN DAMAGE YOUR MOUNT AND WILL NOT BE COVERED BY WARRANTY. USING THREAD LOCKING COMPOUNDS, SUCH AS LOCTITE® OR OTHERS, IS NOT RECOMMENDED AND WILL VOID YOUR WARRANTY.


1

Loosen pre-installed Clamp Screws and install the FAST™ LPVO mount on the M1913 Rail in desired location. Finger tighten Clamp Screws.

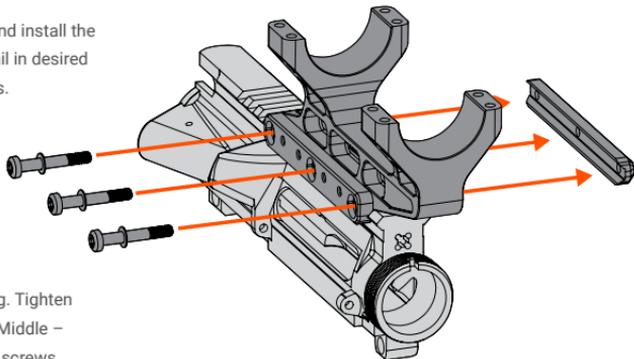


2


Push mount forward against recoil lug. Tighten Clamp Screws in order – Front, Rear, Middle – using a T25 bit driver. Lightly snug all screws before applying final torque to any. **Torque to 35 in-lbs (4 Nm).**

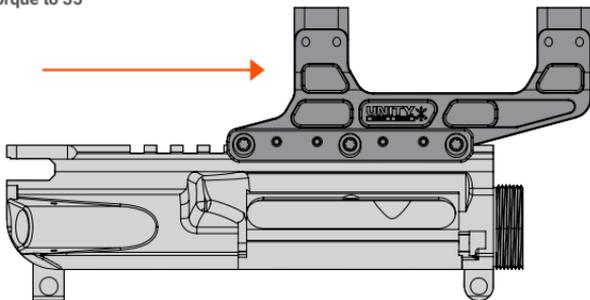

- 3 Install Optic into the FAST™ LPVO mount. Install Top Rings and finger tighten all Ring Screws. Ensure Scope is in the proper position for shooter's eye relief.

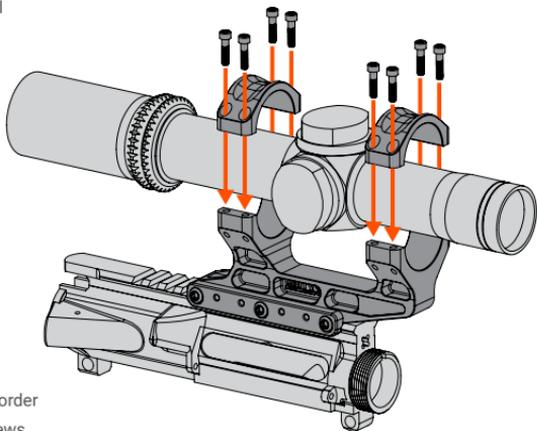

- 4 Level Scope reticle. Tighten Ring Screws in the order shown with a T15 bit driver. Lightly snug all screws before applying final torque to any. **Torque in the pattern below to 18 in-lbs (2 Nm). Complete this pattern two times.**

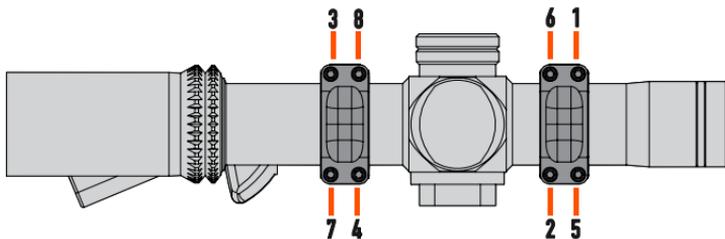

INFO@UNITYTACTICAL.COM

©2023 UNITY Tactical. All Rights Reserved.
Specifications subject to change without notice. PAT: UTIP.CO

